
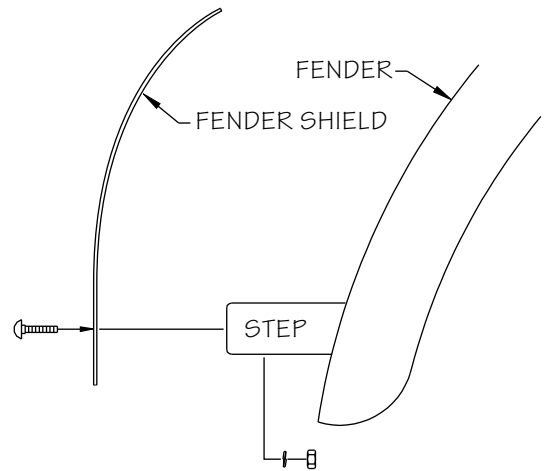
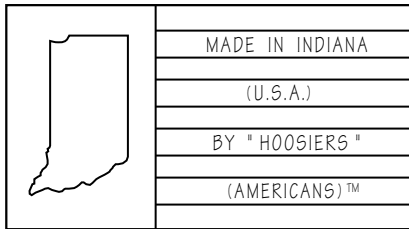


# 379 PETERBILT FENDER SHIELD

P/N 08059

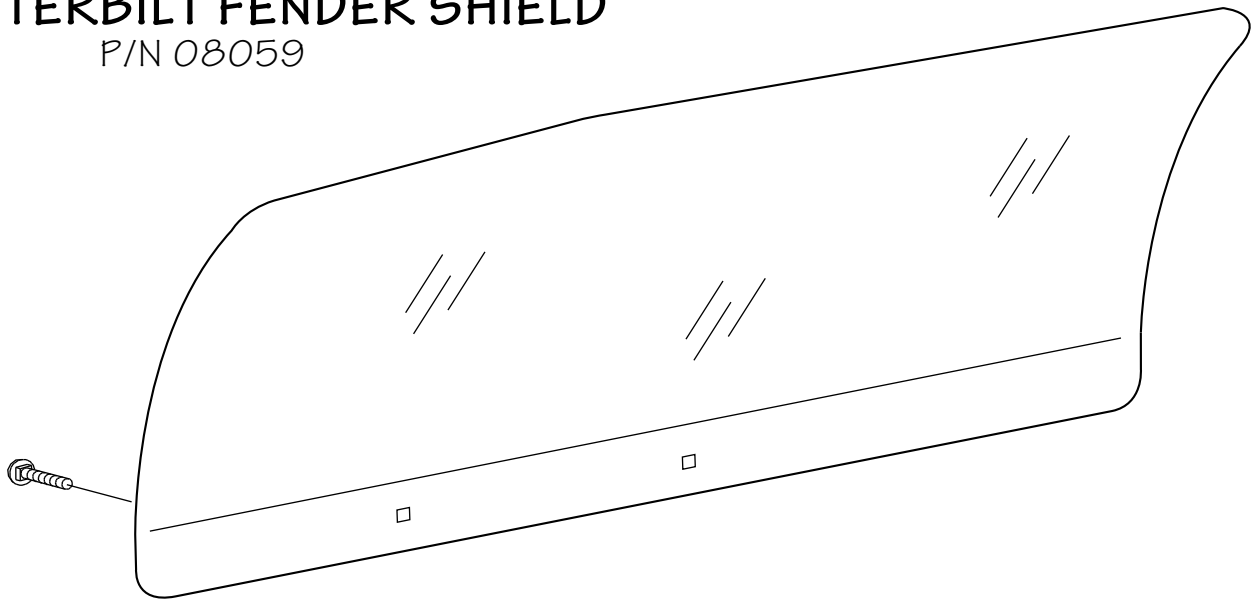

SIDE VIEW

## INSTRUCTIONS

1. UNPACK THE BOX AND INSPECT THE FENDER SHIELDS FOR ANY VISIBLE SIGNS OF DAMAGE PRIOR TO INSTALLATION.
2. POSITION ONE OF THE FENDER SHIELDS INTO THE PROPER POSITION AND MARK THE HOLES TO BE DRILLED IN THE STEP.
3. REMOVE THE FENDER SHIELD AND DRILL THE TWO 3/8" DIAMETER HOLES IN THE STEP.
4. REMOVE THE P.V.C. (PROTECTIVE COATING) FROM THE FENDER SHIELD.
5. PLACE THE BOLTS THROUGH THE FENDER SHIELD, PLACE THE ASSEMBLY INTO POSITION, INSTALL THE LOCKWASHER AND NUT UP FROM THE BOTTOM OF THE STEP. FINALIZE THE POSITIONING AND TIGHTEN.
6. REPEAT STEPS 2 THROUGH 5 TO INSTALL THE OTHER FENDER SHIELD.



BY

