

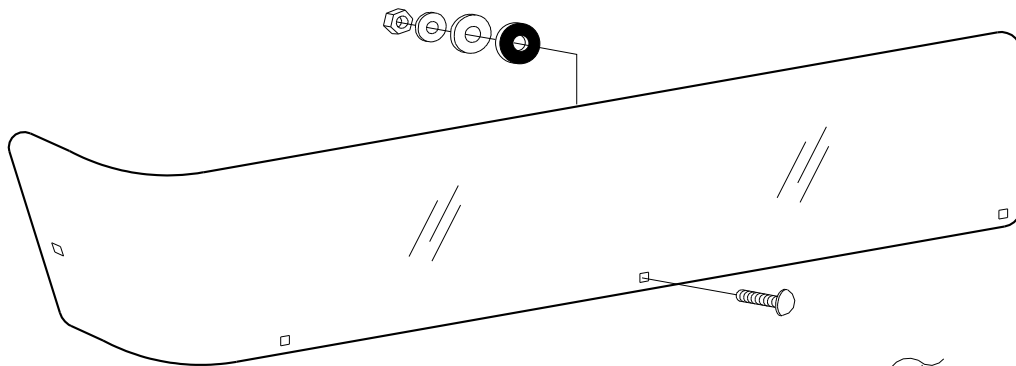


# F'LINER FL MODELS - FENDER SHIELDS

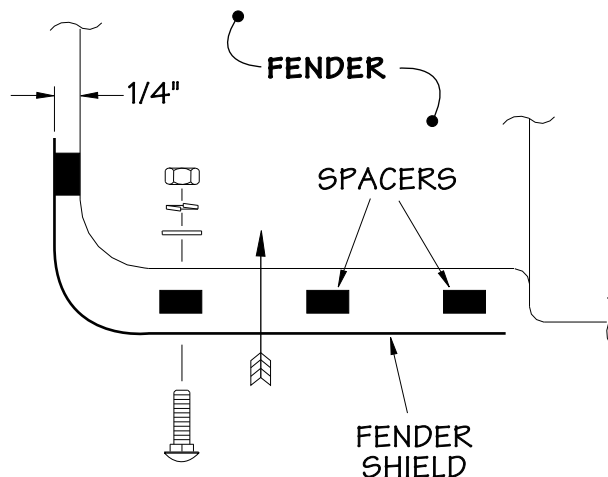

FRONT VIEW

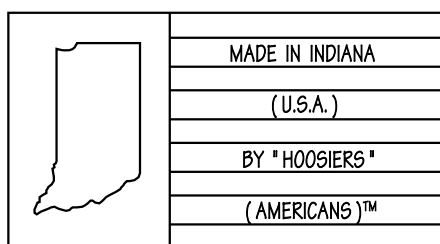

TOP VIEW

## INSTRUCTIONS

1. PLACE THE FENDER SHIELD INTO THE PROPER POSITION AND MARK THE THREE HOLES IN THE FRONT-BOTTOM OF THE FENDER SHIELD WHILE TAKING CARE TO LEAVE 1/4" ROOM FOR THE SPACER AT THE SIDE OF FENDER SHIELD. (SEE "TOP VIEW")
2. DRILL THE THREE 1/4" HOLES IN THE **FRONT** OF THE FENDER. **DO NOT DRILL THE ONE HOLE IN THE SIDE OF THE FENDER AT THIS TIME.**
3. PLACE THE CARRIAGE BOLTS THRU THE HOLES AND ADD THE SPACERS DIRECTLY BEHIND THE FENDER SHIELD.
4. PLACE THIS ASSEMBLY INTO POSITION WITH THE SPACERS IN BETWEEN THE FENDER AND THE FENDER SHIELD.
5. PLACE THE WASHERS, LOCKWASHERS AND NUTS (IN THAT ORDER) ON THE PORTION OF THE BOLTS THAT PROTRUDE THROUGH THE REAR OF THE FENDER TO A "FINGERTIGHT" CONDITION.
6. LOCATE AND DRILL THE REMAINING BOLT HOLES AT THE SIDE OF THE FENDER DIRECTLY THROUGH THE FENDER SHIELD. **BE CAREFUL NOT TO DAMAGE THE FENDER SHIELD DURING THIS OPERATION.**
7. PLACE THE CARRIAGE BOLT AND SPACER INTO POSITION AT THE SIDE OF THE FENDER SHIELD AND REPEAT STEP #5



BY



18050INS

11/5/2007

COPYRIGHT © 2007  
RigSkirts LLC.