
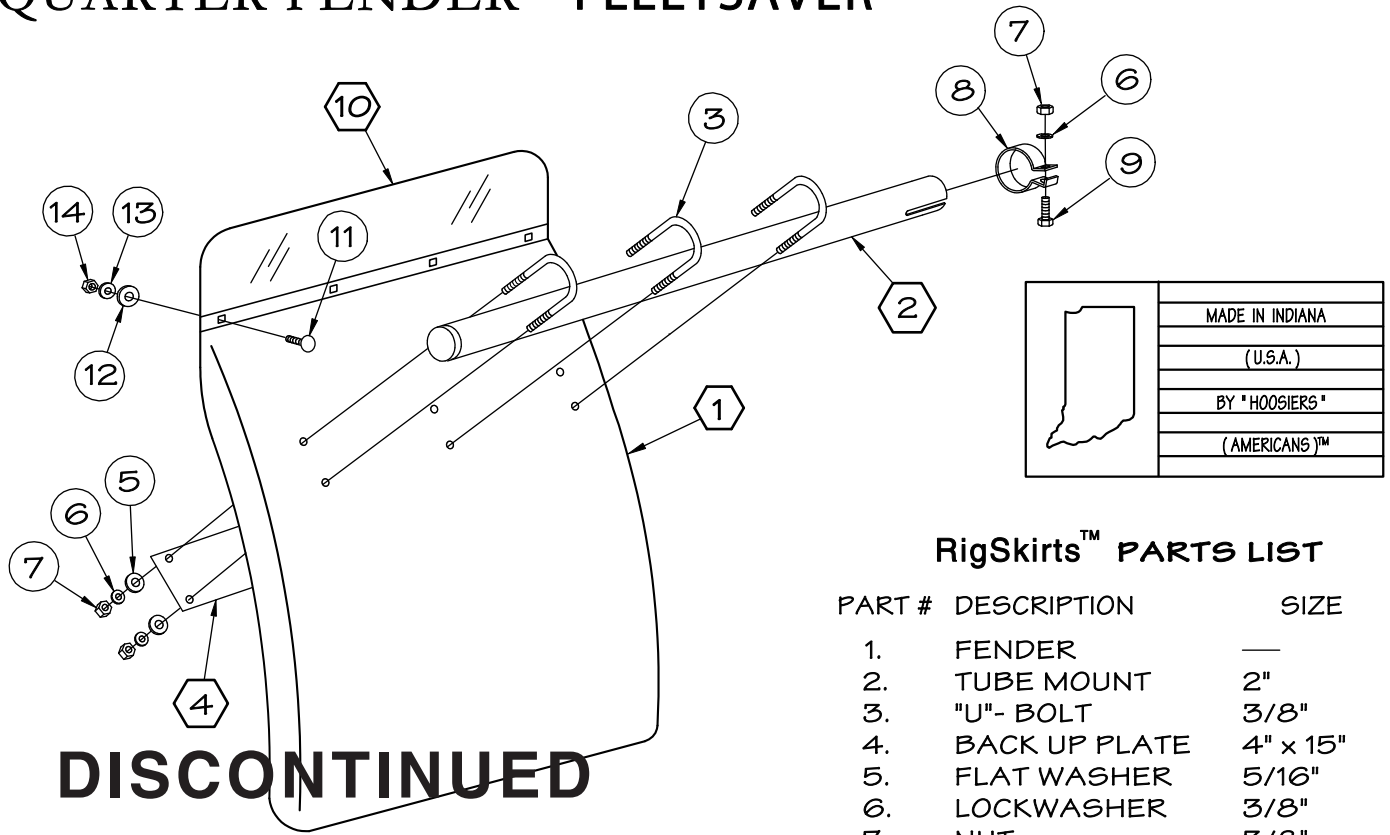



QUARTER FENDER - FLEETSAVER



RigSkirts™ PARTS LIST

PART #	DESCRIPTION	SIZE
1.	FENDER	—
2.	TUBE MOUNT	2"
3.	"U"- BOLT	3/8"
4.	BACK UP PLATE	4" x 15"
5.	FLAT WASHER	5/16"
6.	LOCKWASHER	3/8"
7.	NUT	3/8"
8.	CLAMP	2"
9.	HEX BOLT	3/8" x 1-1/4"
10.	MUD FLAP	6"
11.	CARRIAGE BOLTS	1/4" x 3/4"
12.	FLAT WASHER	1/4"
13.	LOCKWASHER	1/4"
14.	HEX NUT	1/4"

-  DENOTES MAJOR PART-PACKED SEPARATELY
 DENOTES SUB-ASSEMBLY PART-IN PARTS CONTAINER


INSTRUCTIONS

- PRIOR TO MOUNTING THE TUBES ON THE FENDERS, POSITION THE TUBES ON THE FENDER TO INSURE A RIGHT HAND AND LEFT HAND MODEL. (ONE FOR EITHER SIDE OF THE TRUCK)
- ATTACH MOUNTING TUBES (PART #2) TO THE FENDER. AFTER YOU HAVE THEM ASSEMBLED TO A "FINGERTIGHT" CONDITION, ALTERNATELY TIGHTEN EACH "U" BOLT UNTIL THE LOCKWASHERS ARE COMPRESSED. **CAUTION:** OVER TIGHTENING MAY RESULT IN DAMAGE TO THE FENDER AND VOID THE WARRANTY.
- MOUNT THE TOP FLAPS (PART #10) TO THE REAR OF THE FENDERS USING THE CARRIAGE BOLTS PROVIDED.
- LOCATE THE TRUCK MOUNTS AND INSTALL. **NOTE!** TO LOCATE THE TRUCK MOUNTS, THE TOP OF THE FLAP SHOULD BE ONE TO TWO INCHES BELOW THE TOP OF THE FIFTH WHEEL IN A LEVEL POSITION.
- PLACE THE TUBE CLAMP (PART #8) OVER THE MOUNTING TUBES (PART #2). SLIDE THE MOUNTING TUBES OVER THE TRUCK MOUNTS, POSITION THE FENDER OVER THE THE CENTER OF THE TIRES AND TIGHTEN THE CLAMPS.

COPYRIGHT © 2007
RigSkirts LLC.



BY

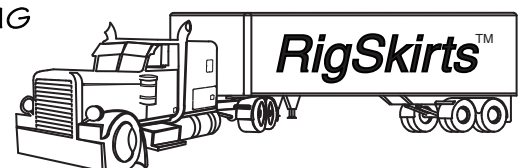

11/6/2007

408050INS