


VOLVO - GM FENDER SHIELDS

P/N 58050

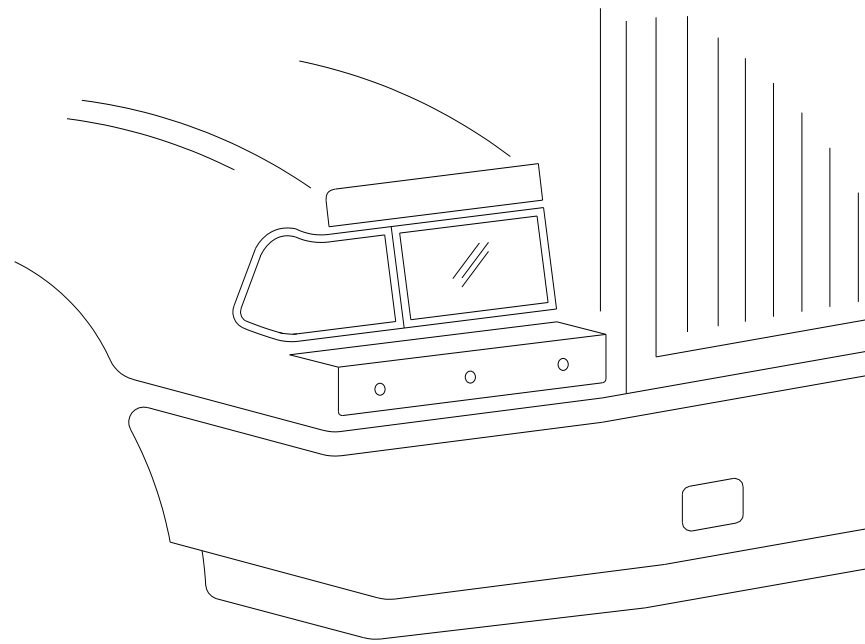


INSTRUCTIONS

1. REMOVE THE HEADLIGHT ASSEMBLY.
2. LOCATE THE TWO PROTRUDING LUGS WITH 1/8" HOLES ON THE UPPER REAR OF THE HEADLIGHT ASSEMBLY.
3. BOLT THE UPPER FENDER SHIELD TO THESE TWO LUGS. NOTE! PLACE THE RADIUSED CORNER OF THE FENDER SHIELD TO THE OUTSIDE OF THE FENDER.
4. REPLACE THE HEADLIGHT ASSEMBLY. **NOTE!** IT MAY BE NECESSARY TO REAM OUT THE HEADLIGHT MOUNTING HOLES TO START THE SCREWS INTO PLACE AS THIS IS A VERY TIGHT FIT.
5. MOUNT THE LOWER FENDER SHIELDS AS FOLLOWS:
 - A. CAREFULLY CENTER AND LINE UP THE BOTTOM EDGE OF THE FENDER SHIELD WITH THE BOTTOM EDGE OF FENDER.
 - B. MARK THE THREE HOLES AND DRILL 1/8" DIAMETER.
 - C. MOUNT WITH THE SCREWS PROVIDED.

58050INS



BY

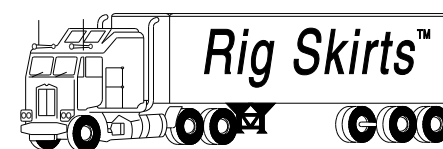

COPYRIGHT © 1996
ACCURATE INDUSTRIES, INC.