

	MADE IN INDIANA
	(U.S.A.)
	BY "HOOSIERS"
	(AMERICANS)™

KENWORTH FUEL TANK TRIM CHANNELS

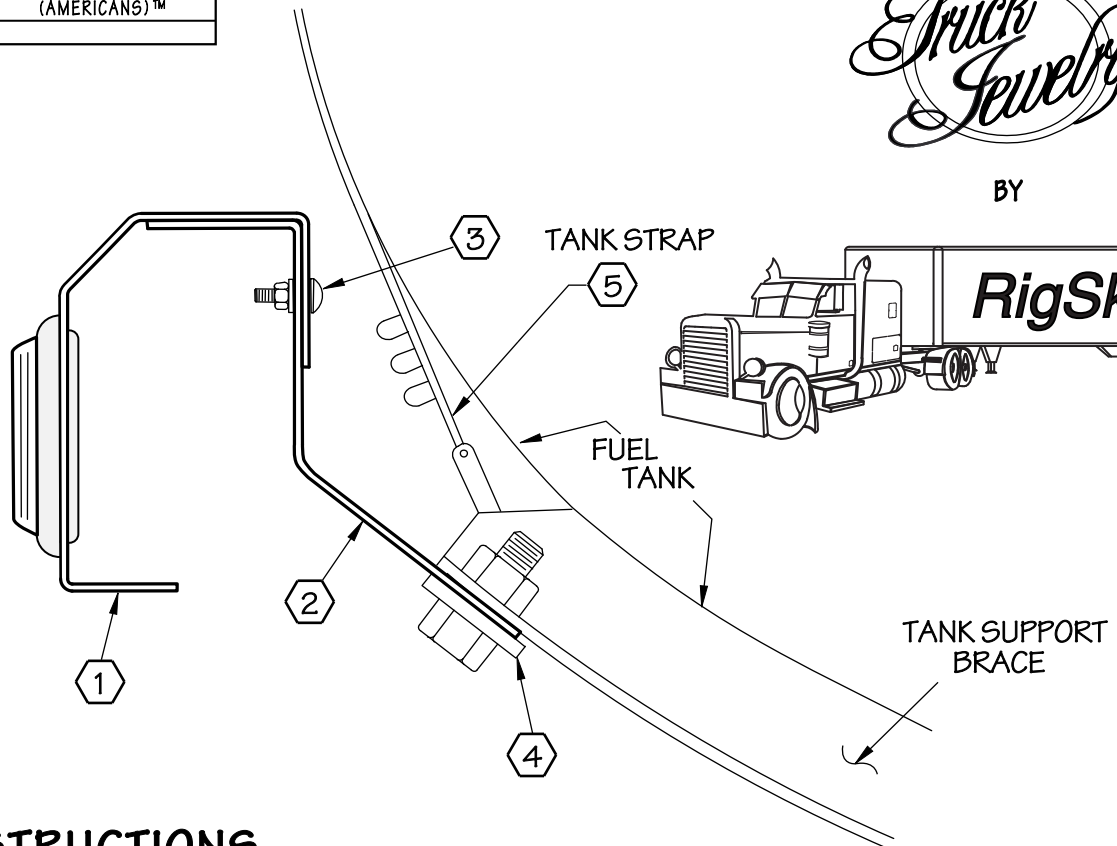

BY

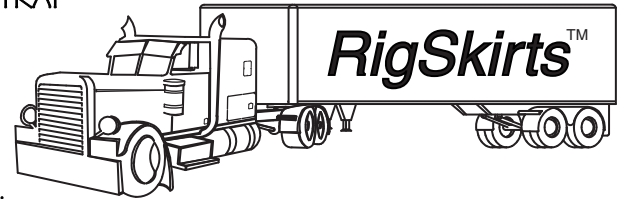

INSTRUCTIONS

1. LOOSEN THE THREE FUEL TANK STRAPS **5**
2. LOOSEN (BUT DO NOT REMOVE) THE SIX BOLTS ON THE THREE FUEL TANK SUPPORT BRACES.
3. BOLT THE THREE MOUNTING BRACKETS **2** TO THE TRIM CHANNEL **1** AND LEAVE ALL OF THE BOLTS "FINGERTIGHT" UNTIL THE INSTALLATION IS COMPLETE. **NOTE!** MAKE SURE THE BOLTS **3** ARE INSTALLED EXACTLY AS SHOWN IN THE ILLUSTRATION ABOVE.
4. SLIDE THE MOUNTING BRACKETS **2** IN BETWEEN THE TANK SUPPORT BRACE AND THE SPACER **4** UNDERNEATH THE BOLT HEAD.
5. ALTERNATELY TIGHTEN THE BOLTS MAKING SURE THE SLOTS IN THE BRACE **2** HAVE "BOTTOMED OUT" AGAINST THE BOLT.
6. TIGHTEN THE THREE FUEL TANK STRAPS.
7. TIGHTEN THE BOLTS **3** TO SECURE THE TRIM CHANNEL. (THIS WILL REQUIRE PLACING A WRENCH UP THROUGH THE SLOT IN THE BOTTOM OF THE TRIM CHANNEL).
8. IF YOU HAVE PURCHASED A MODEL WITH LIGHTS, YOU ARE NOW READY TO INSTALL AND WIRE THE LIGHTS.