



# WESTERN STAR COMBINATION FENDER SHIELDS

P/N 68161, 68162, 68166, 68167

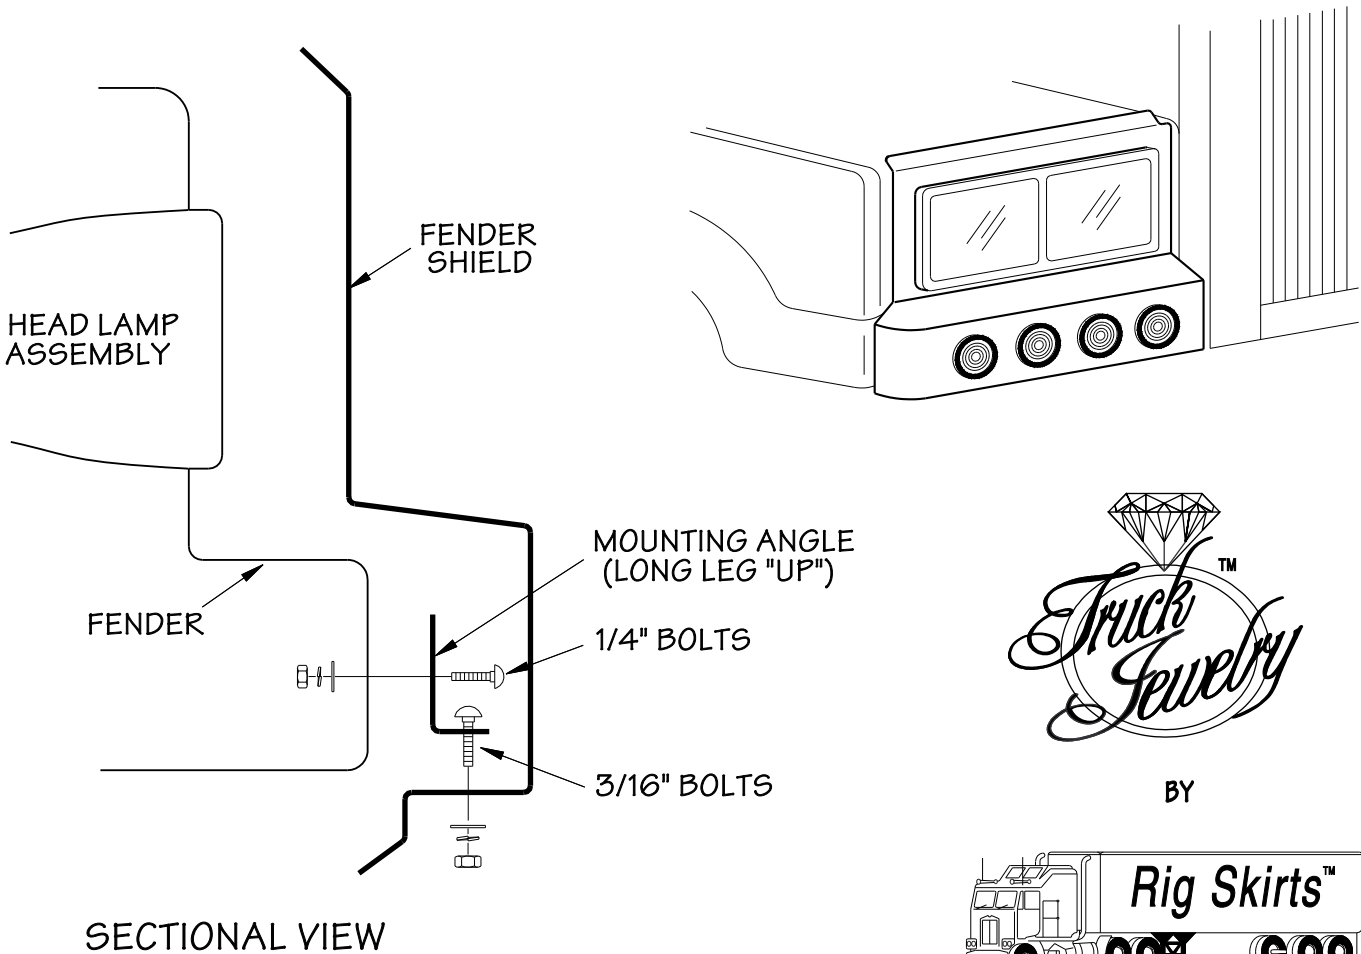

BY

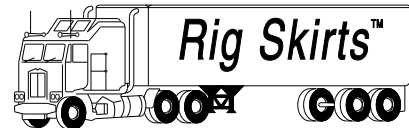

## INSTRUCTIONS

1. REMOVE THE HEADLAMP TRIM.
2. BOLT THE MOUNTING ANGLE TO THE FENDER SHIELDS TO A "FINGERTIGHT" CONDITION USING THE PROPER BOLTS AS SHOWN IN THE SECTIONAL VIEW.
3. PLACE THIS ASSEMBLY INTO THE PROPER POSITION ON THE TRUCK.
4. BOLT THE HEADLAMP TRIM BACK INTO PLACE AND CHECK FOR PROPER ALIGNMENT. MARK AND DRILL THE HOLES INTO THE FENDER.
5. PLACE THE BOLTS THROUGH THE MOUNTING ANGLE AND HOLES YOU DRILLED INTO THE FENDER.
6. TIGHTEN ALL BOLTS. **CAUTION:** DO NOT OVERTIGHTEN
- 7 YOU ARE NOW READY TO WIRE AND INSTALL THE LIGHTS.

	MADE IN INDIANA
	(U.S.A.)
	BY "HOOSIERS"
	(AMERICANS) <sup>TM</sup>

#68161INS

COPYRIGHT © 1996  
ACCURATE INDUSTRIES, INC.