
	MADE IN INDIANA
	(U.S.A.)
	BY "HOOGIERS"
	(AMERICANS)™

## WESTERN STAR COWL PANELS

CONSTELLATION SERIES

P/N 68190, 681919, 681922, 681927 & 68193

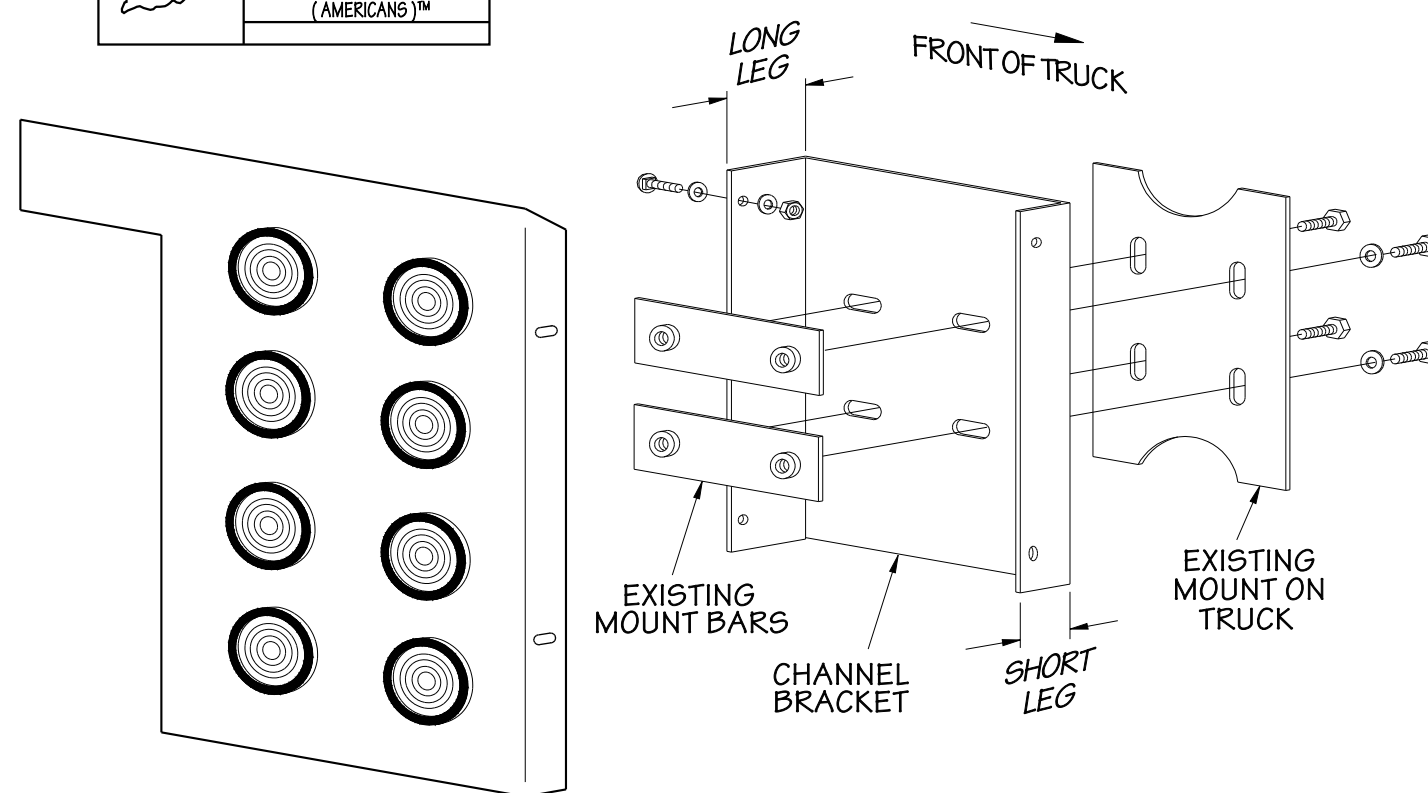

### INSTRUCTIONS

1. PRIOR TO REMOVAL OF THE EXISTING COWL PANELS, IT IS NECESSARY TO KEEP IN MIND THAT WE WILL BE USING **ALL** OF THE EXISTING BOLTS, NUTS, WASHERS AND MOUNT BARS.
2. REMOVE THE EXISTING COWL PANELS AND PLACE ALL OF THE BOLTS IN A CONTAINER FOR LATER USE.
3. INSTALL THE CHANNEL BRACKET WITH THE SHORT LEG TOWARDS THE FRONT OF THE TRUCK USING THE EXISTING BOLTS AND MOUNT BARS AS SHOWN IN THE ILLUSTRATION. LEAVE ALL OF THE BOLTS "FINGERTIGHT" AS IT WILL BE NECESSARY TO MAKE ADJUSTMENTS LATER.
4. FASTEN THE NEW COWL PANEL ONTO THE CHANNEL BRACKET.
5. CAREFULLY ALIGN THE ENTIRE ASSEMBLY AND TIGHTEN ALL BOLTS.  
**CAUTION: MAKE SURE YOU LEAVE PLENTY OF ROOM AT THE TOP OF THE PANEL AS THE TRUCK CAB IS MOUNTED ON RUBBER AND CAN IMPACT DOWN AGAINST THE TOP OF THIS PANEL.**
6. IF YOU HAVE PURCHASED A MODEL WITH LIGHTS, YOU ARE NOW READY TO INSTALL AND WIRE THE LIGHTS.

68190INS

IL-00288  
12-9-96



BY



COPYRIGHT © 1996  
ACCURATE INDUSTRIES, INC.