

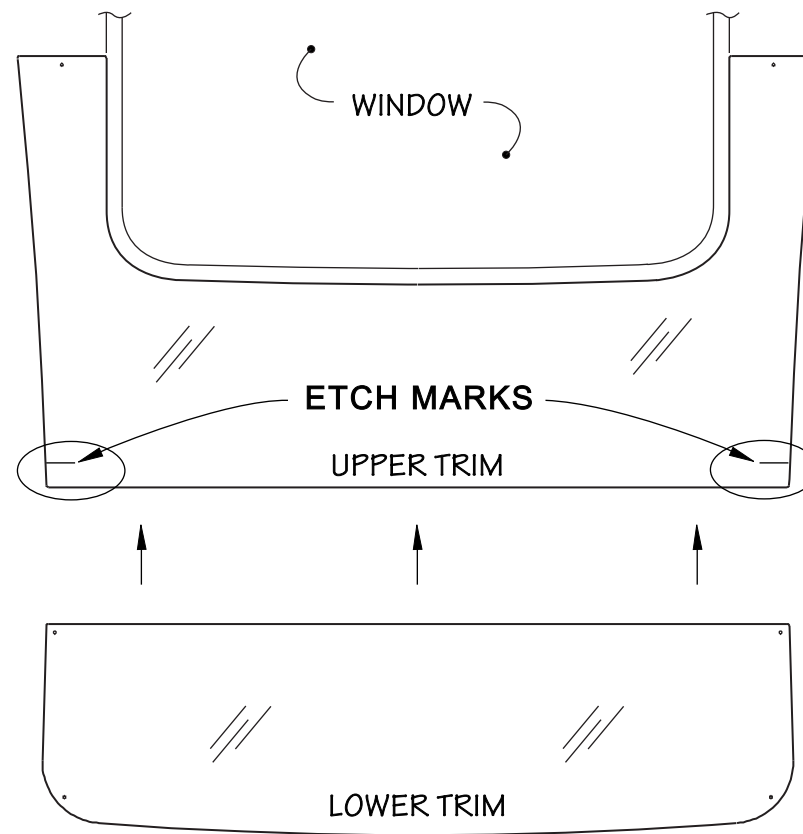


FREIGHTLINER FRONT AERODYNE TRIM

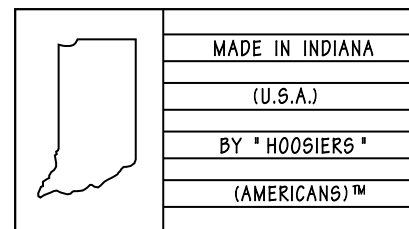

BY

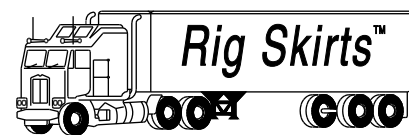

INSTRUCTIONS

1. PLACE THE UPPER AERODYNE TRIM AROUND THE SLEEPER WINDOW AND MARK THE CORNER LOCATIONS WITH A FELT TIP MARKER.
2. PEEL THE PLASTIC PROTECTIVE STRIPS FROM THE TWO SIDED TAPE ON THE BACKSIDE OF THE UPPER TRIM, CAREFULLY POSITION THIS PIECE IN PLACE AND PRESS DOWN FIRMLY TO ASSURE THAT THE TAPE HAS ADHERED TO THE TRUCK ROOF.
3. VISUALLY FIND THE "ETCH MARKS" ON THE UPPER TRIM PIECE AS SHOWN ABOVE.
4. PEEL THE PLASTIC PROTECTIVE STRIPS FROM THE TWO SIDED TAPE ON THE BACKSIDE OF THE LOWER TRIM PIECE.
5. CAREFULLY POSITION THE LOWER TRIM AGAINST THE ETCH MARKS AND PRESS FIRMLY INTO PLACE. DRILL THE HOLES INTO THE TRUCK ROOF AND INSTALL THE SIX SCREWS SUPPLIED IN THIS KIT.
6. USE WINDEX AND A SOFT COTTON CLOTH TO CLEAN THE VISOR AFTER INSTALLATION. CAUTION: NEVER USE AN ABRASIVE COMPOUND ON THE STAINLESS AS IT WILL DAMAGE THE FINISH.

FA0300INS

3-12-01

COPYRIGHT © 2001
ACCURATE INDUSTRIES, INC.
ALL RIGHTS RESERVED