


## K.W. T2000 FENDER SHIELDS

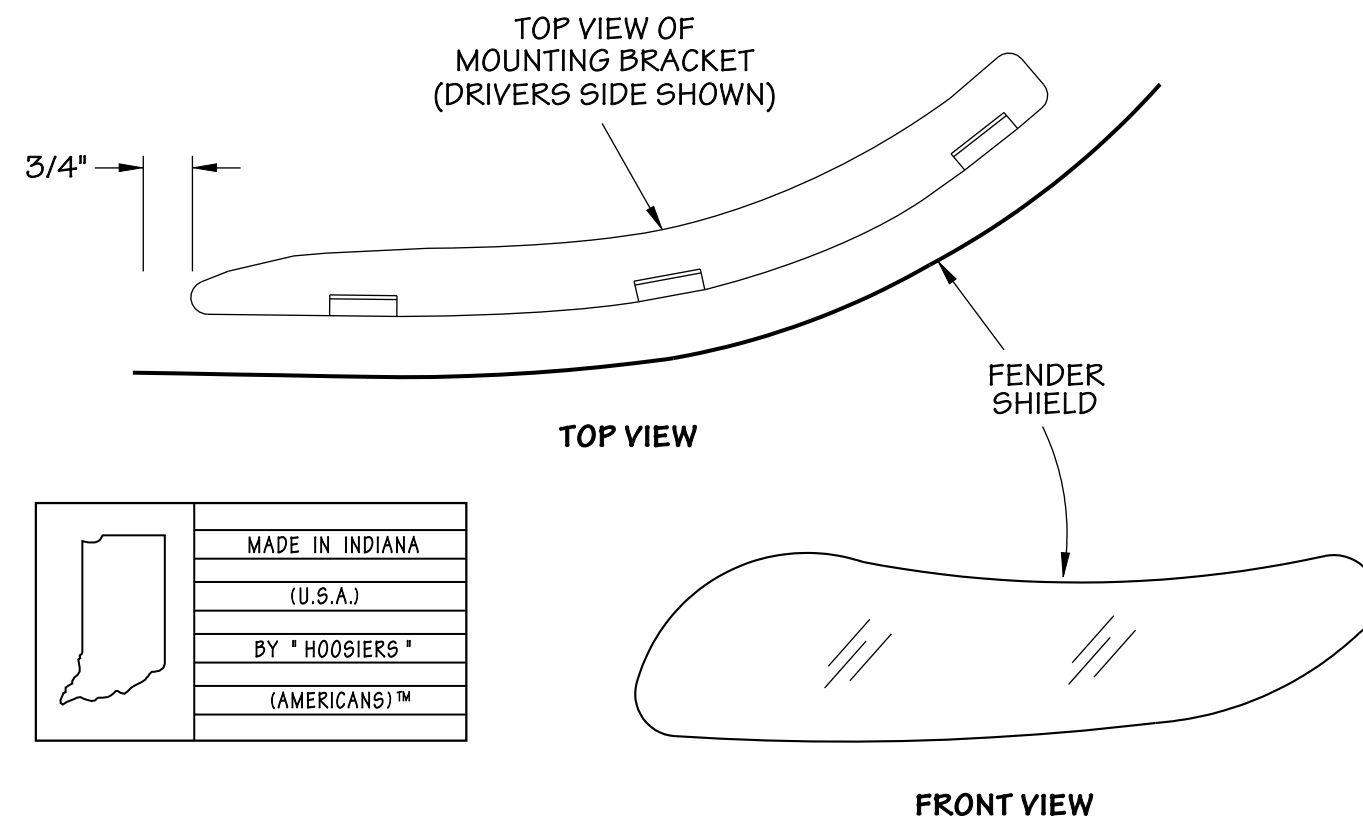

### INSTRUCTIONS

1. DO NOT REMOVE THE PROTECTIVE PAPER FROM THE TWO SIDED TAPE UNTIL WE ARE READY TO INSTALL THE PARTS ONTO THE TRUCK. REMEMBER: MAKE SURE THE PARTS ARE IN POSITION AFTER THE PROTECTIVE PAPER IS REMOVED AND PRIOR TO MOUNTING.
2. CAREFULLY STUDY THE FRONT AND TOP VIEWS ABOVE AND DETERMINE WHICH PARTS MATCH THE DRAWINGS AND ALSO FIT ON THE DRIVERS SIDE OF THE TRUCK.
3. HOLD BOTH OF THE PIECES IN YOUR HANDS WITH THE FENDER SHIELD PROTRUDING PAST THE END OF THE MOUNTING BRACKET APPROXIMATELY 3/4" AS SHOWN IN THE TOP VIEW ABOVE.
4. PLACE THIS ASSEMBLY ON TOP OF THE BUMPER, AND MOVE AROUND UNTIL IT LOOKS GOOD TO YOU. MARK THE POSITION OF THE MOUNTING BRACKET WITH A FELT TIP MARKER.
5. REMOVE THE PROTECTIVE PAPER FROM THE TWO SIDED TAPE ON THE **BOTTOM** OF THE MOUNTING BRACKET AND PLACE THE BRACKET IN THE "MARKED" ZONE ON TOP OF THE BUMPER. PRESS DOWN FIRMLY TO SEAT THE BRACKET IN PLACE.
6. PEEL THE PROTECTIVE PAPER FROM THE THREE "FINGERS" PROTRUDING UPWARDS THAT HOLD THE FENDER SHIELD.
7. PLACE THE FENDER SHIELD BACK INTO POSITION BEING CAREFUL TO LEAVE A LITTLE CLEARANCE BETWEEN THE BUMPER AND THE FENDER SHIELD, AND PRESS FIRMLY INTO PLACE.
8. REPEAT ALL OF THE PREVIOUS STEPS TO INSTALL THE FENDER SHIELD ON THE PASSENGER SIDE OF THE TRUCK.

KD0050INS 10-5-00



BY



COPYRIGHT © 1997  
ACCURATE INDUSTRIES, INC.  
ALL RIGHTS RESERVED