CAB LIGHT LED BRACKET

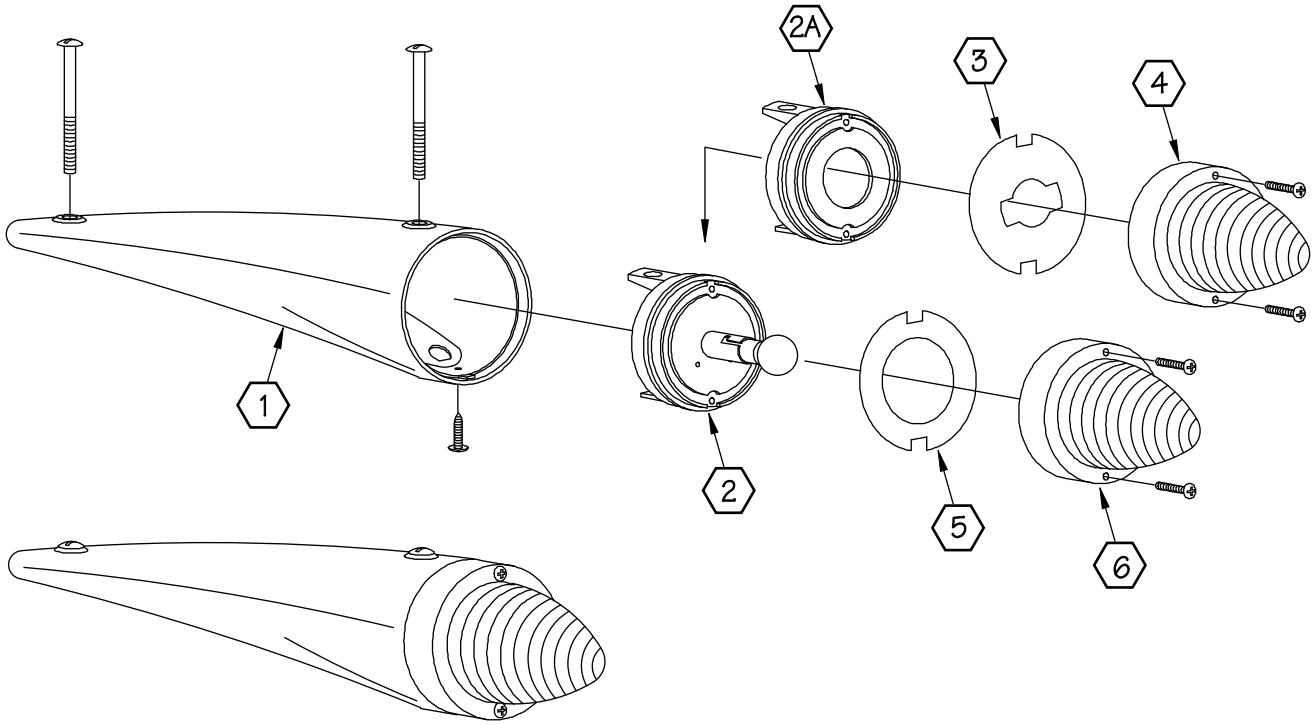

INSTRUCTIONS

1. REMOVE THE MARKER LAMP ASSEMBLY FROM THE TRUCK BY REMOVING THE TWO SCREWS FROM THE VERY TOP OF LAMP.
2. REMOVE THE TWO SCREWS FROM THE LENS ⟨6⟩ AND PULL THE LENS AWAY FROM THE FIXTURE ALONG WITH THE GASKET. PLACE THESE AND ALL OTHER PARTS IN A CONTAINER TO AVOID LOSING THEM WHILE PROCEEDING WITH THE REST OF THE INSTALLATION.
3. TURN THE LAMP ⟨1⟩ UPSIDE DOWN AND REMOVE THE SMALL SCREW FROM THE FRONT OF THE BASE NEAR THE LIGHT BULB.
4. PULL OUT THE PLASTIC RETAINER ⟨2⟩ AND REMOVE THE LIGHT BULB. CUT BOTH WIRES AS CLOSE AS POSSIBLE TO THE SOURCE AND PULL EVERYTHING OUT OF THE LAMP HOLDER BASE.
5. TAKE A HOLE SAW AND INSERT THE CENTER LEAD-IN DRILL AN THROUGH THE LAMP HOLDER BASE FROM THE BACK SIDE OF PLASTIC RETAINER ⟨2⟩. DRILL AN 1-1/2" HOLE IN THE RETAINER COMPLETELY REMOVING THE METAL LAMP HOLDER ASSEMBLY.

11/8/2007

60900INS

COPYRIGHT © 2007
RigSkirts LLC.

Truck Jewelry™ BY RigSkirts™